


Important Notice

From 1st of November 2010, Pascal has changed the way of piping connection for the following models, specifically using the pipe thread.

CTU CTT BTU CLU CLT BLU CSU CST CNA

The details are explained in the following sketch. Thank you for your attention.

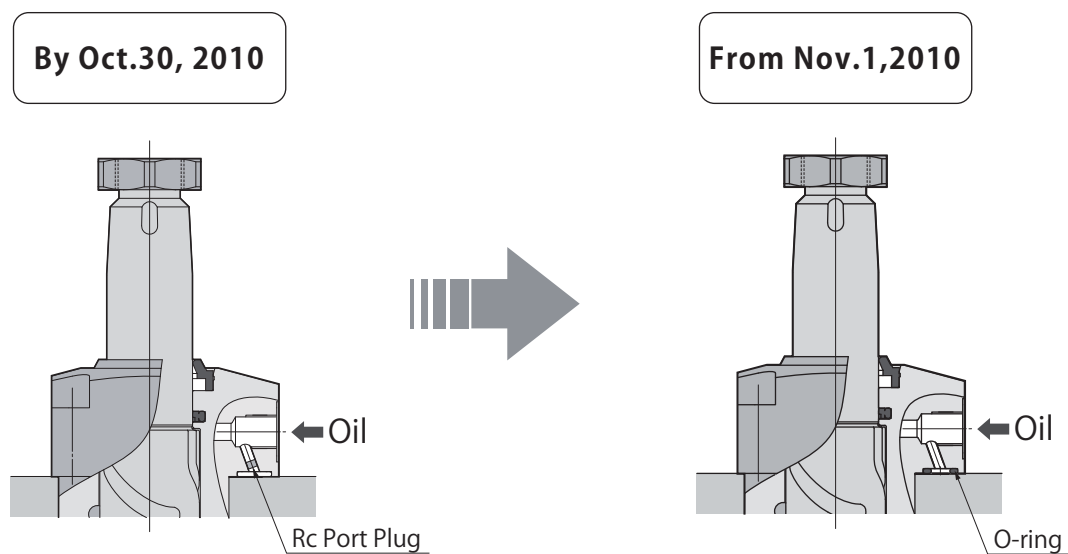

Plug the o-ring port with Rc port plug
after removing the o-ring and G port plug.
(Rc port plugs are packed with the clamp)

O-ring seals the port instead of Rc plug.
Do not remove the o-ring initially
mounted with the clamp.

Please ask Pascal for a solution in case of the following condition of mount.

It may cause oil leakage due to the sealing incompleteness.

- O-ring cannot seal the oil because O-ring port get in the sealing way.
- There is no sealing surface by O-ring.
 - ex : Mounting with square spacer block.
 - : Mounting with levelling block. (4 pcs of pipe)

In case a flow control valve is mounted on pipe thread, it have to be removed to another location.